

Decoclean 💈 🖁 5 colours §







DECOCLEAN















SMOOTH PROTECTION PANEL

Applications

This wall protection has been especially developed for areas exposed to a high risk of infection in order to help in the fight against in-hospital illnesses and to reduce bacterial proliferation. It is recommended for:

- Operating theatres
- Intensive care, transplant and serious burns wards
- Neonatology
- Central sterilisation
- All high infection risk areas, including those at Level 4 on the Pasteur scale.


Description

- Model: Decoclean smooth protection panel
- Standard panel dimensions: 3 m x 1.30 m
- Custom options: cuttting to size, bendings, chamfers
- Thickness: 2 mm
- Material: Antibacterial and Bs2d0 fire-rated PVC, solid colour
- Surface finish: smooth
- Fixing: Adhesive bonding with Gerflor acrylic glue or Gerflor universal mastic glue. Joints between panels can be made using silicone joints or PVC weld joints, colour matched to the range
- Colours: 5 standard

Specification

- Description: smooth protection panel (Decoclean as manufactured by Gerflor) in rigid and antibacterial PVC, Bs2d0 fire-rated and solid-coloured. Its surface is smooth. Its length is 3 m, width 1.30 m and thickness 2 mm. A protective film must protect the panel during the whole installation time. The level required for biocleaning should be validated for very high infectious risk areas such as operating theatres (sector 4) according to the Pasteur Institute of Lille (France). The chemical and mark resistance should have been proved on the usual cleaning products according to ISO 26987. The ease of nuclear decontamination according to ISO 8690 should be excellent.
- Environment: No heavy metals and no substance potentially subjected to any REACH restriction are used in its manufacture, nor PBT/PBA. The calcium-zinc thermal stabilisation process is used. The emission level of volatile substance in inside air has been tested according to ISO 16000-6 and is under 15µg/m³. 100% of the product are recyclable.
- Colour: selected by architects from manufacturer's standard range.
- Installation method: glue as per manufacturer's instructions.

Specification and technical drawings can be downloaded from our website www.gerflor.com

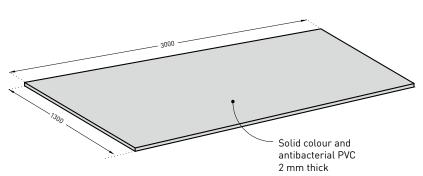

For an impeccable finish:

- Silicone joints
- Weld beads

colour coordinated with the panels