

[312_{v1}] Lock+ 30 / 55

CONDITIONS

SUBSTRATES

ACCESSORIES


INSTALLATION

LAYING CONDITIONS


SUBSTRATE EVENNESS	Flatness requirement: < 5 mm/2 metre ruler or < 1 mm/20 cm ruler	Flat, clean, sound, dry and solid substrate.
STORAGE	At least 24 hours before laying	Store the floor covering in the room in which it is going to be laid.
LAYING TEMPERATURE	15°C < T < 26°C	Ideally 20°C.
PERIMETER EXPANSION GAP	4 to 5 mm	Around the edges of the room, fixed objects and door thresholds. The gap must be covered by a finishing profile. Wet rooms (e.g. bathrooms): MS Polymer or PU sealant under the finishing profile.
DIVISIONS	Every 10 linear metres or surface area > 150 m ²	Each closed room or premises must be considered separately. Divide the tiles/planks lengthwise by applying an adhesive (such as Gerflor Fix & Free 100) or a gap covered with a ROMUS finishing profile.
DIRECT SUNLIGHT (SUNNY AREAS, BAY WINDOWS, SKYLIGHTS, SKYDOMES, ETC.)	Floor temperature < 60°C	Loose laying is allowed as long as the ambient temperature is regulated. In order to prevent the floor temperature from reaching excessive values up to 60°C or above, direct sunlight on the floor should be obscured by curtains, blinds or other suitable protection. Otherwise, maintain the floor covering in place with a suitable adhesive (please contact the adhesive manufacturer).
VERANDA / CONSERVATORY	Prohibited	Prohibited, whatever the substrate.
FIRST USE	Immediately after installation	

USAGE CONDITIONS


USAGE TEMPERATURE	10°C < T < 30°C	
STATIC LOADS	< 30 kg/cm ² and < 200 kg/support	Do not use rubber end caps. Use flat (not tapered) end caps without any pattern that are suitable for PVC. Use end caps on furniture legs.
CASTOR CHAIRS	PVC-compatible castors according to EN 12529	Recommendation: protective mat beneath castor chairs.

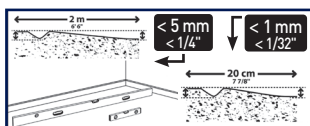


SUBSTRATE EVENNESS

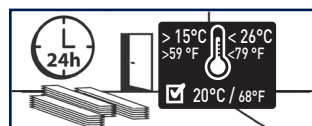


STORAGE

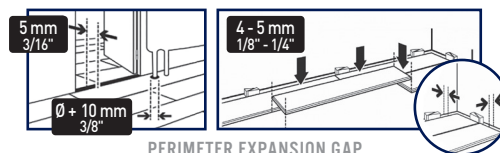

PERIMETER EXPANSION GAP

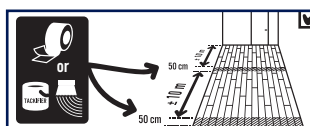




DIVISIONS

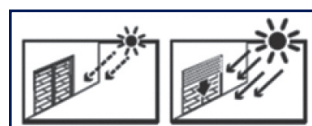

DIRECT SUNLIGHT



STATIC LOADS

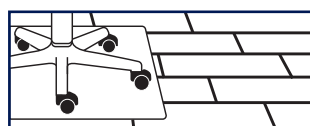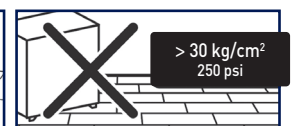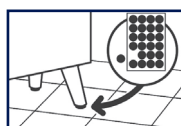

CASTOR CHAIRS



MAINTENANCE

IMPORTANT : The information in this document is valid from: 21/06/01 and is subject to change without notice. As we carry out continuous technical improvements, our customers should check with us that this document is still in force before starting any work.

[312_{v1}] Lock+ 30 / 55

CONDITIONS

SUBSTRATES



ACCESSORIES

INSTALLATION

SUBSTRATE

CONDITIONS

For installing this floor covering

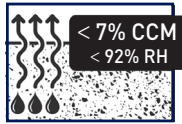Concrete floor, painted concrete, levelling compound, cement based screed, anhydrite (calcium sulphate)-based screed	✓	Cement: < 7% CCM, 92% RH – Anhydrite-based substrate: < 1%. If necessary, prepare the substrate and apply a smoothing compound to remove any surface irregularities.	
Ceramic tiles	✓	If tile joints < 4 mm wide and < 1 mm deep, and no unevenness. Otherwise, apply a grouting product or levelling compound.	
Glued compact PVC / rubber / linoleum floorings	✓	After examination and repair depending on the condition of the floor covering. If more than 10% is in bad condition, complete removal is necessary followed by new substrate preparation.	
Foam backed PVC floorings	!	Not recommended.	
Textile floor covering (carpet) / textile-backing PVC floorings	✗	Prohibited.	
Vinyl asbestos tiles	✓	Refer to Gerflor's technical guide for overlaying asbestos floors.	
Acoustic underlayers	!	Only Gerflor Silence Plus 19 dB (residential premises classified max CEN 23). Refer to the corresponding installation guidelines.	
Glued parquet / laminated floor / floating parquet or wood based panels	✗	Prohibited (complete removal).	
OSB	✗	Complete removal or lining boards.	
Wood-based panel flooring on joists or battens / parquet nailed on battens ventilated underneath	✓	Allowed.	
Reversible underfloor heating	✓	Allowed.	
Underfloor heating with circulating water, max 28°C	✓	Allowed.	
Radiant electric underfloor heating	!	Gluing mandatory.	

The preparation of the substrate must comply with the current relevant standards in the country of use.

For any information on product properties and usages, please refer to its technical datasheet: www.gerflor.com.

[312_{v1}] Lock+ 30 / 55

CONDITIONS

SUBSTRATES

ACCESSORIES

INSTALLATION

TOOLS

Utility knife - Tape measure - Metal ruler -
Non-rebound mallet- Romus ref. 94964 - Pull bar - Tapping block
Mitre shears - ROMUS ref. 93401 / JANSER ref. 237,530,000

ADHESIVES FOR SUNNY AREAS

Refer to adhesive manufacturers recommendations

DIVISIONS

FIX&FREE 100 and ROMUS accessories

UNDERLAYER

Gerflor Silence Plus 19 dB – Ref.: 59490001 – See Installation Guidelines [331]

FINISHES

Design skirting ref. 6086 / MDF design skirting ref. 5947 - See installation guidelines [504A] and [504B].

Door threshold: refer to the Romus catalogue.
Wet rooms (e.g. bathrooms) : MS Polymer or PU sealant.

[312_{v1}] Lock+ 30 / 55

CONDITIONS

SUBSTRATES

ACCESSORIES

INSTALLATION




The floor covering should be examined prior to installation for any visible defects. The flooring must belong to the same production batch. If there are any visible defects, please notify GERFLOR and do not begin installation without its prior approval.

LAYOUT


- Mix the planks / tiles from several boxes from the same series.

- The planks / tiles must be oriented in the direction of light or in the direction of traffic.

- Perimeter expansion gap : 4 to 5 mm. At room edges, fixed objects and door thresholds. The gap must be covered by a finishing profile. Wet rooms (e.g. bathrooms): MS Polymer or PU sealant under the finishing profile.

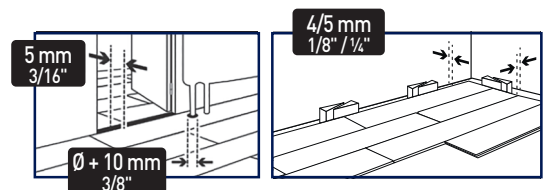


- Start laying the planks/tiles in a corner of the room. Move backwards as you lay, with the tongues facing towards you

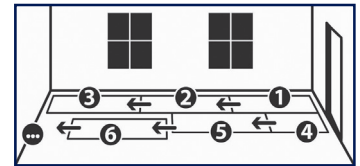


- Offset each row by one third of a plank length, or by half in case of tiles (staggered joints)


Lay the tiles in staggered joint (offset by half a tile).

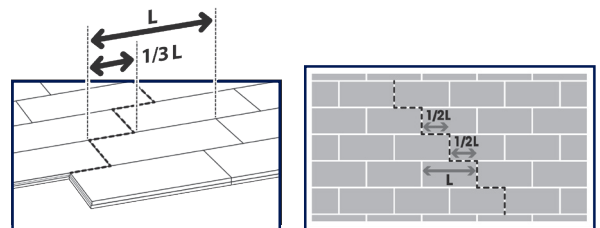

- In standard sections, the width of the planks/tiles must be > 1/3 plank or 1/2 tile.

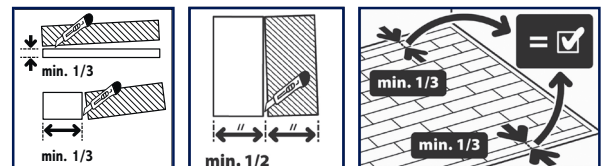

- At the end of the rows, the length of planks/tiles must be > 25 cm, particularly at the entrances and doorways.

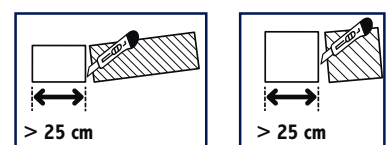

[312_{v1}] Lock+ 30 / 55

CONDITIONS



SUBSTRATES

ACCESSORIES


INSTALLATION

INTERLOCKING AND CUTTING OUT

- Start assembling the long edge, then move the tile towards the previously installed one, and assemble the short edges together. Use a non-rebound mallet if necessary

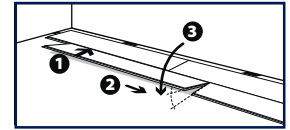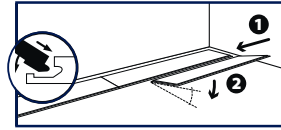


- Finish the interlocking with a tapping block and non-rebound mallet.

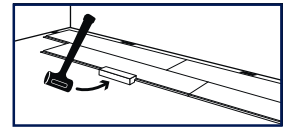





- Make sure that there is no unevenness between planks/tiles.

Incorrect interlocking may lead to imperfect alignment, gaps between tiles/planks, or clic breakage. If necessary, re-adjust the alignment using a tapping block and a plastic hammer.

- To assemble the last row, use a pull bar and a non-rebound mallet.

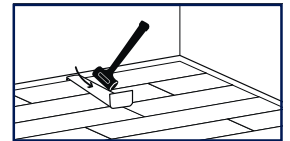

- Peripheral cutting using the overlapping method. Offcuts can be re-used at the beginning of a row.

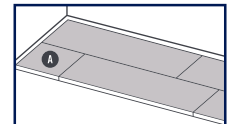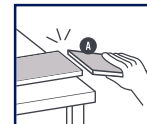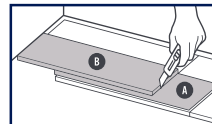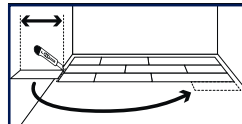

- Cutting at the base of the door frames.

Use high leverage mitre shears. ROMUS ref: 93401 / JANSER ref: 237 530 000.

